




Use a 2mm hex

Tighten the preload adjuster bolt until the adjuster edges touch

Do not over-tighten the preload adjuster. It is okay to leave a gap in the adjuster, as long as the top edges touch.

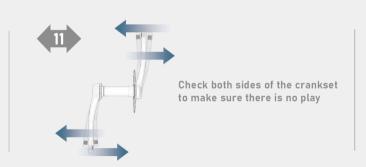



Install the pedal washer between the crank arm and pedal.